



This brief version instruction manual does not replace the operating manual! The original operating manual delivered with the FlyMarker® mini has to be read carefully, understood and followed.

1. Turning on FlyMarker® mini

1. Turn FlyMarker® mini on with the ON/OFF-button.



NOTICE

When it is turned on, FlyMarker® mini performs a light, harmless stroke and therefore should not be placed on a workpiece when being turned on.

- ✓ The display lights up and the control performs a self-test.
- ✓ The *start window* appears.
- ✓ Press the spacebar. After a short time the *main menu window* appears. FlyMarker® mini is in operator mode.

2. Enter marking data

Characters can be entered through the keypad.

Use the arrow keys () to move the cursor to any place in the character sequence.
Use one of the arrow keys () or the Enter key to switch between lines.



Use the *Insert* key to select the writing mode. The selected writing mode is shown in the main menu.



The possibilities are:



Insert mode

The new character is inserted to the left of the cursor.



Overwrite mode

 
The character below the cursor is overwritten by the new character.

Use the *shift*-key to switch between uppercase and lowercase letters.



The *F1*-key can be used to select the special character level.

The possibilities are:



Use the Delete-key to delete the character below the cursor.



Use the Back delete-key to delete the sign on the left of the cursor.

 


Press the ESC-key to leave the menu.



3. Enter substitutes (Only possible after entering the password!)

With the F4-key the mode for choosing preset substitutes can be selected.



i Substitutes start with the ">"-sign and end with the "<"-sign.
They only can be inserted or deleted completely ("> ... <").

Enter auto numbering

The number currently being used is displayed and marked. >100<

Enter auto date

The current date is displayed and marked. >06.05.13<

Enter auto time

The current time is displayed and marked. >09:55<

Enter logo

The chosen logo is displayed and marked.

Press the ESC-key to leave the menu.

4. Locking / unlocking the keyboard

1. Press the key button.

✓ The password dialog box appears.

2. F2 activates the keylock.



i Do the same to unlock the keyboard.

5. Mark

▶ FlyMarker® mini must not be moved during the marking that follows.
Always avoid "air marking"!

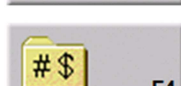
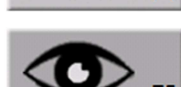
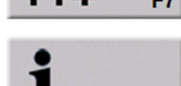
i Briefly press the trigger.
The trigger does not need to stay pressed until the end of marking.

6. Function keys main menu

1. The main menu consists of two levels.
2. To change levels press the key shown below (arrow).



Description of function keys:

	F1	F1 = Shift key (standard characters ↔ special characters)
	F2	F2 = File manager
	F3	F3 = Parameter menu
	F4	F4 = Insert substitutes
	F5	F5 = Preview
	F7	F7 = Settings
	F8	F8 = Information
	F9	F9 = Language
	F10	F10 = Teach-in

When the **i-key** is pressed, the *help window* comes up (shows notes on the key functions).



Please note:

Using the user password, temporarily changes of the presetting can be done.
 Permanent changes of the values can be done by using the master password only.
 (→ Chapter „Entering passwords“ in the operating manual)



7. Menu structure

